


FIG. 40 BRICK DOOR SILL

AS

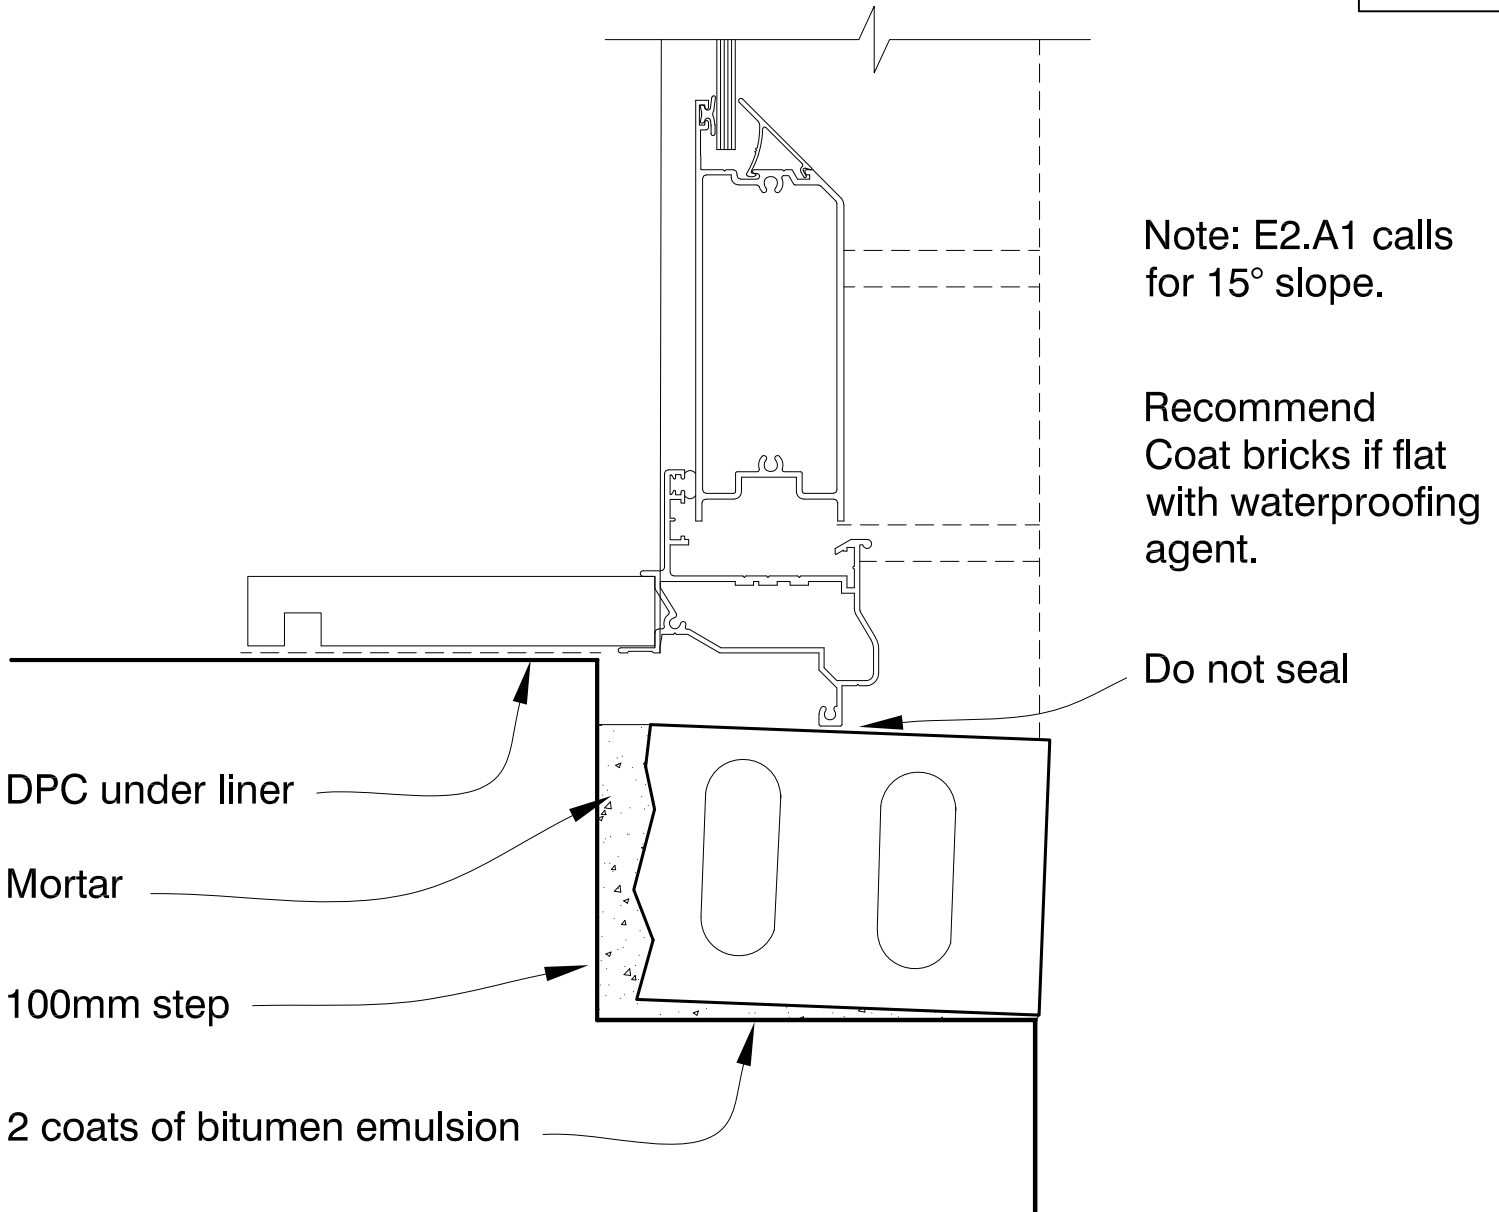

Note: If brick is to be sloped further either increase the depth of the step or reduce the thickness of brick.

WANZ 55mm aluminium support bar omitted for clarity. Refer www.wanz.co.nz