


# FIG. 53 HEAD OF ARCH

## Double Veneer using Formwork

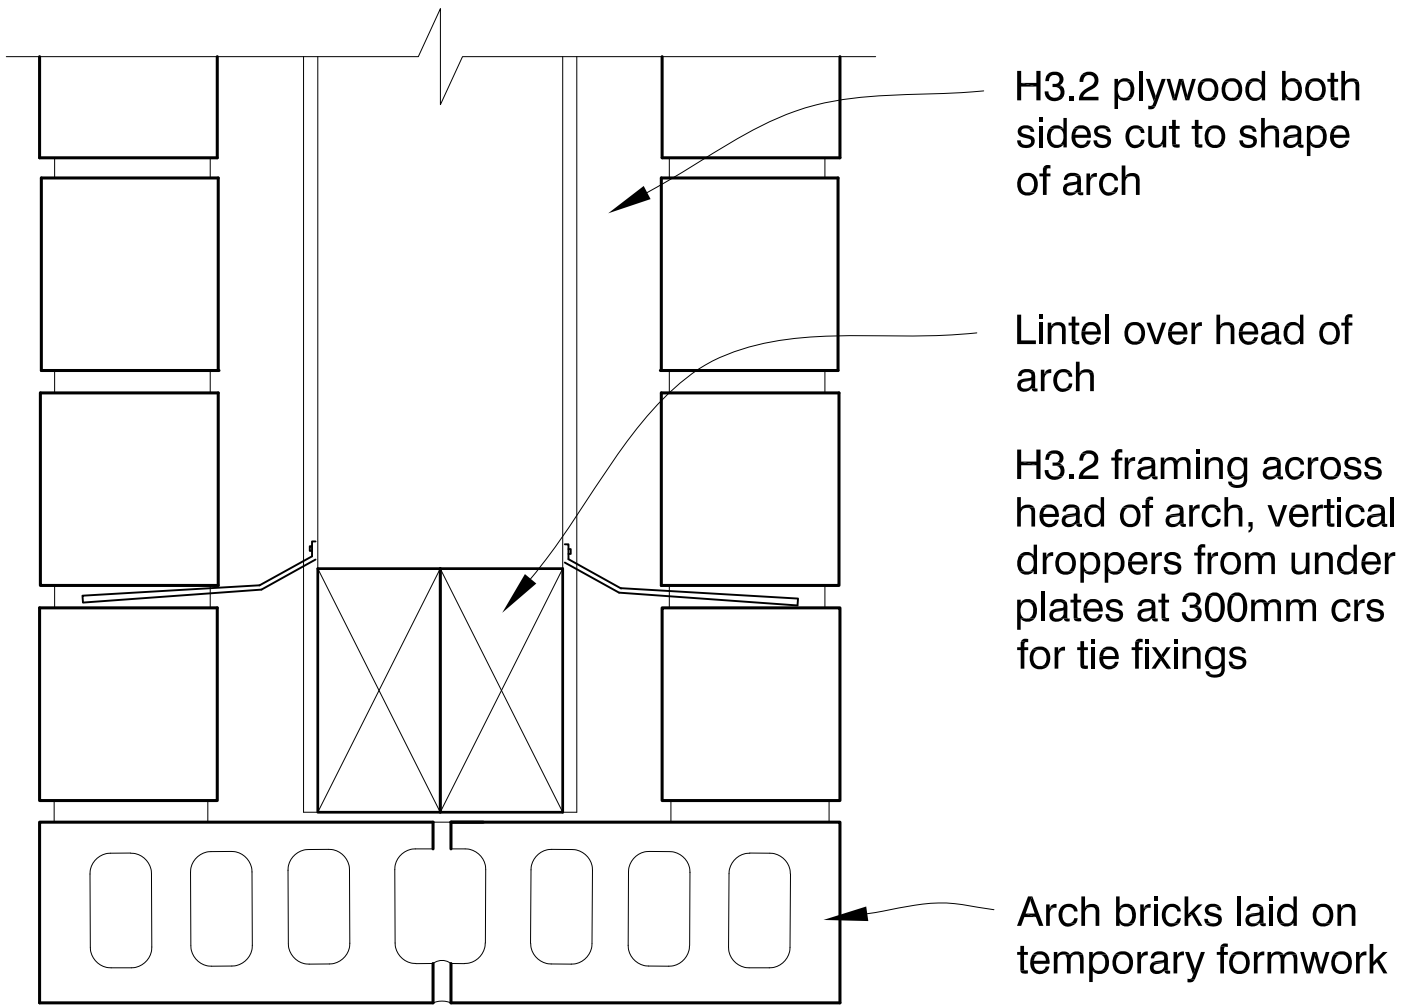

Note: Use timber wedges between arch formwork and bricks for easy removal of formwork.