


**FIG. 100 CORBELLING**

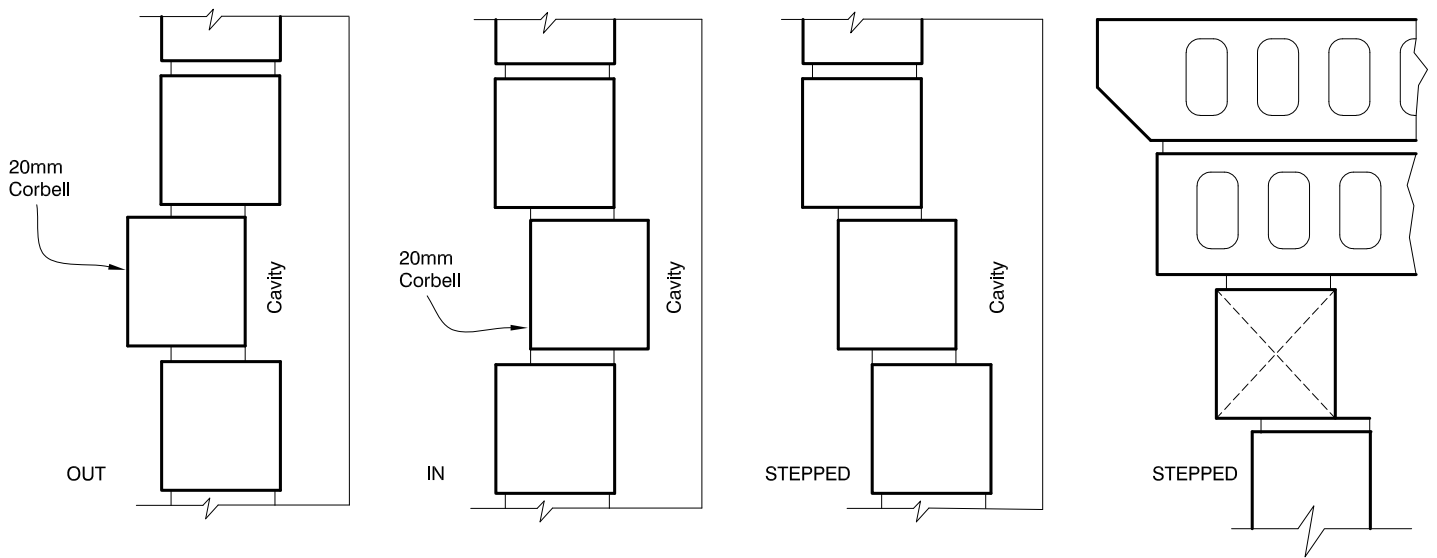

**NOTES:**

1. Bricks laid in the normal manner can be corbelled up to 20mm. Any greater dimension than this reduces the mortar bed too much and the core holes in the bricks may become visible.
2. A combination of 70mm & 90mm bricks can be used for corbelling.
3. Bricks laid on their side may be corbelled more than 20mm as they are seated on a full mortar bed. They may even infringe the cavity space provided the frame is adequately protected with an impervious membrane.
4. Where bricks are laid on their side remember that the holes may be exposed at the ends of walls or corners. This can be overcome by gluing a 15mm slip to cover the holes, mitring the corner, or detailing a projection to hide the holes.