


FIG. 114 TIMBER RETAINING WALL

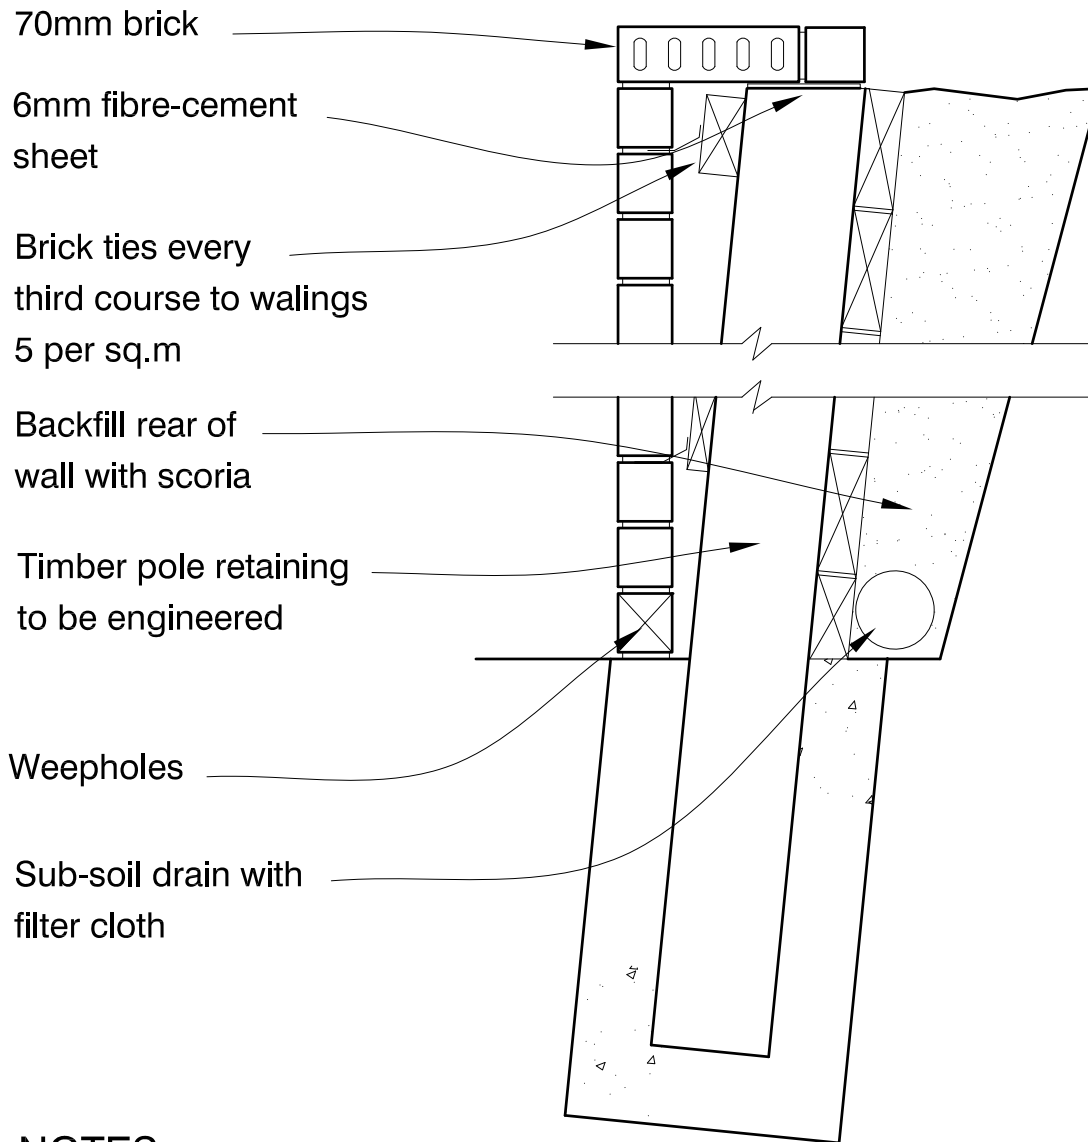

NOTES

1. Do not use bricks for retaining
2. Seal horizontal top cappings to minimise water penetration
3. Avoid filling cavities with concrete which may result in long term white salts on the brick face
4. Use 5 brick ties/ per sq. metre